



Comfort, Aesthetics and Reliability

User Manual


208L CHEST FREEZER, Model Code: TRCF208W

Please read this manual carefully before using, and keep it for future reference

INSTRUCTION MANUAL

208 L CHEST FREEZER

TRCF208W

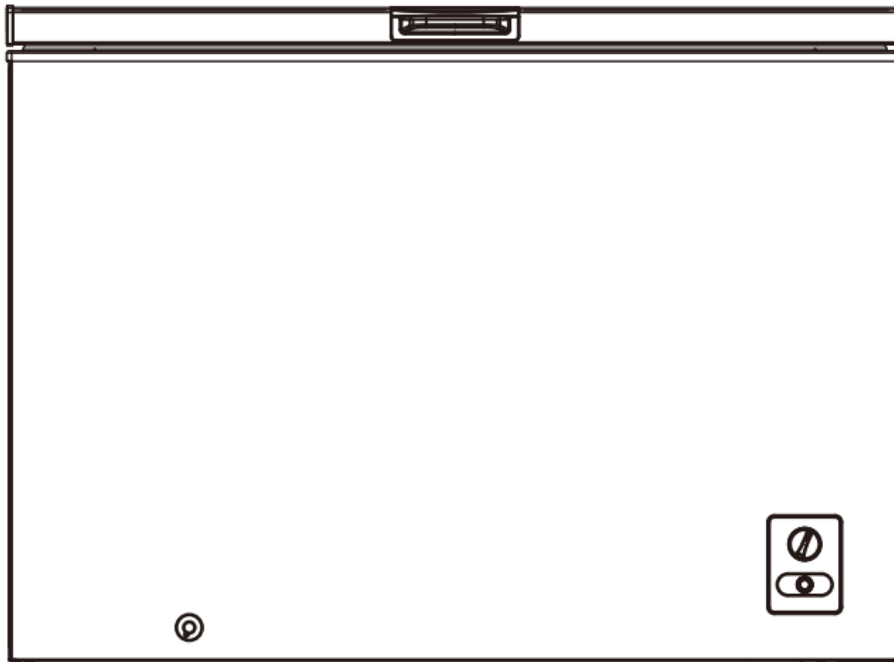

CONTENTS

1	PACKAGE.....	4
1.1	IMPORTANT - CHECK FOR ANY DAMAGE OR MARKS	4
1.2	HANDLING.....	4
1.3	BEFORE USING YOUR NEW APPLIANCE.....	4
2	SAFETY WARNINGS.....	5
2.1	IMPORTANT INFORMATION	5
2.2	GENERAL WARNINGS	5
3	INSTALLATION.....	7
3.1	POSITIONING.....	7
3.2	ELECTRICAL CONNECTION.....	7
4	OPERATION AND MAINTENANCE	8
4.1	PARTS IDENTIFICATION.....	8
4.2	Freezer control	9
4.3	STORING FOOD AND DRINK	9
4.4	FREEZING FRESH FOOD.....	10
4.5	DEFROSTING FOOD.....	10
5	CLEANING AND MAINTENANCE	10
5.1	USE WITH CARE	10
5.2	DEFROSTING THE FREEZER	11
5.3	REFRIGERATOR LAMP	11
5.4	PROLONGED PERIOD OF DISUSE.....	11
5.5	CLEANING THE APPLIANCE.....	11
6	TROUBLESHOOTING.....	11
7	TECHNICAL SPECIFICATIONS	13
8	DISPOSAL	13
9	CUSTOMER CARE	14

1 PACKAGE

1.1. IMPORTANT - CHECK FOR ANY DAMAGE OR MARKS

Please thoroughly inspect your goods **at the delivery time**, if you notice any damage to your goods:

- Please notify the delivery team at the time of delivery and **do NOT accept damaged product**.
- Please notify us immediately as the problem can be solved and damaged product can be returned to the courier office.

When package is opened, and damage/marks are found on the appliance, it must be reported within 24 hours. Do not install or connect the item and keep the package as it was originally, if you wish to claim for damage/marks under the manufacturer's warranty. This does not affect your statutory rights.

Evidence of damage will be required.

1.2. HANDLING

- Do not use the door and/or handle to carry or move the appliance.
- Carry out the movement and transportation in the original packaging.
- Pay maximum attention to the appliance while loading/unloading and handling.
- Ensure that the packaging is securely closed during handling and transportation.
- Protect from external factors (such as humidity, water, etc.) that may damage the packaging.
- Take caution while handling and transporting appliance to prevent risk of poor operation due to possibility of bumps, crashes, drops, etc.

1.3. BEFORE USING YOUR NEW APPLIANCE

- Read this guide, taking special note of the 'Safety Warnings' section.
- Remove any protective film that may still be on your appliance.
- This instruction manual has been prepared jointly for multiple models. Some of the specifications explained in the manual, may not be included in your appliance. Pay attention to the explanations with illustrations while reading the manual.

NOTE:

This instruction manual has been prepared jointly for multiple models. Some of the specifications explained in the manual, may be slightly different or not be included in your appliance. Pay attention to the explanations with illustrations while reading the manual.

2 SAFETY WARNINGS

2.1. IMPORTANT INFORMATION

Read this manual thoroughly before you start using the appliance.

The safety precautions instructions reduce the risk of fire, electric shock and injury when correctly complied to.

Please take notice of all warnings, follow the instructions, basic precautions and accident prevention measures when using this appliance.

NOTE: *This appliance should be installed by a licensed electrician or warranty will be voided.*

2.2. GENERAL WARNINGS

- Always keep this instruction booklet together with the appliance for future consultation.
- In the event of resale of the appliance or change of ownership, ensure that the instruction booklet is supplied with the appliance so that new owner is fully aware of all instructions and warnings present in this document.
- These warnings have been drawn up to ensure the safety of the user and others. Therefore read all instructions carefully prior to appliance installation and use.
- Disconnect the mains plug before carrying out any cleaning or maintenance operations (e.g. bulb replacement).
- This appliance has been designed to be used exclusively by adults. Ensure that children do not play near or with the appliance.
- All modifications to the electrical mains to enable appliance installation must be carried out by a qualified technician.
- Do not use an extension cord. On completion of installation, check that the appliance is not standing on the power cable.
- Domestic refrigerators and/or freezers are designed exclusively to store and/or freeze foodstuffs.
- During normal operation, the condenser and compressor, located at the rear of the appliance can reach high temperatures. Ensure that installation is carried out according to the instructions contained in this booklet. Insufficient ventilation will impair operation and damage the appliance. Never cover or obstruct the ventilation slats on the appliance.
- Never allow children to play with the appliance.
- If the appliance is transported in a horizontal position, the oil in the compressor may flow into the refrigerant circuit.
- Leave the appliance standing vertically for at least two hours before switching it on, to ensure that oil flows back into the compressor.
- All refrigerators and freezers have surfaces that are subject to the formation of frost.
- Depending on the model, this frost can be removed automatically. (Automatic defrosting) or manually when necessary. Never attempt to remove frost with sharp objects as this may damage the evaporator and impair efficient appliance operation. Let the frost thaw naturally; never use hot water.

- Never put sparkling drinks or bottles of water in the low temperature compartments (freezer/cooler) as they can explode.
- We strongly advise against putting hot liquids or food in the refrigerator or filling ribbed containers to the maximum capacity.
- Never carry out any modifications to your appliance.
- Never attempt to repair the appliance yourself. Repairs carried out by unqualified persons can cause serious damage; always contact the Service Center and use original spare parts only.
- The refrigerant and insulation in this appliance do not contain any gases harmful to the ozone or which contribute to the greenhouse effect. However, disposal must be carried out in compliance with the relative standards regarding protection of the environment.
- Never use the base, drawers, doors etc. to stand on or as supports.
- Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
- Do not use mechanical devices or other means to accelerate defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliance inside the food storage compartments of the appliance, unless they of the type recommended by the manufacturer.
- Please keep the products away from the fire or similar glowing substance before you dispose the refrigerator.
- Before you throw away your old refrigerator or freezer:
 - Take off the doors.
 - Leave the shelves in place so that children may not easily climb inside.
 - If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance can not be used in camping.
- This appliance can not be used in public transportation.
- The appliance shall be used for indoor only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the appliance is faulty or has a visible damage, do not operate the appliance.
- Do not touch the plug with wet hands. Do not pull the cord to plug off, always hold the plug.
- The packaging materials are dangerous for children. Keep packaging materials away from the reach of children.

3 INSTALLATION

3.1. Positioning

Position the appliance away from heat sources such as stoves, heaters, radiators, direct sunlight etc.

Before connect the power supply, remove the supporting base and then screw down the front foot of appliance correctly to make it leveled correctly.

This appliance is suitable in 'T' climate.

Climate Class	Ambient Temperature
T	From +16°C to +43°C

Appliances must not be exposed to rain or direct stream of water. Sufficient air must be allowed to circulate in the lower rear section of appliances, as poor air circulation can affect performance. Built-in appliances should be positioned away from heat sources such as heaters and radiators and out of direct sunlight. Behind the appliance there should be a free space of at least 75mm. Kitchen units (e.g. cupboards) should be at least 50mm away from the appliance in order to assure adequate ventilation. There should be 100mm clearance between both sides of the appliance and other obstacles.

The distance between the top or two sides or reverse side of the refrigerator and wall should not be shorter than 10cm.

3.2. Electrical connection

Before connecting the appliance to the power supply, ensure that the voltage and frequency as indicated on the data plate correspond to those of the electrical mains.


The power plug for the appliance shall be connected to the power socket with earthing terminal.

Put the appliance in upright position for at least 2 hours before switching it on. Clean the internal enclosure, except for the lamp holder and lamp, with moist cloth, add few drops of neutral detergent to remove the "new" odor and dry thoroughly. Never use abrasive detergents and/or powders which can damage the finish.

Note: Wait 3-5 minutes before restarting if you unplug the refrigerator. The unit may fail to operate properly if restarted too quickly.

4 OPERATION AND MAINTENANCE

4.1. PARTS IDENTIFICATION

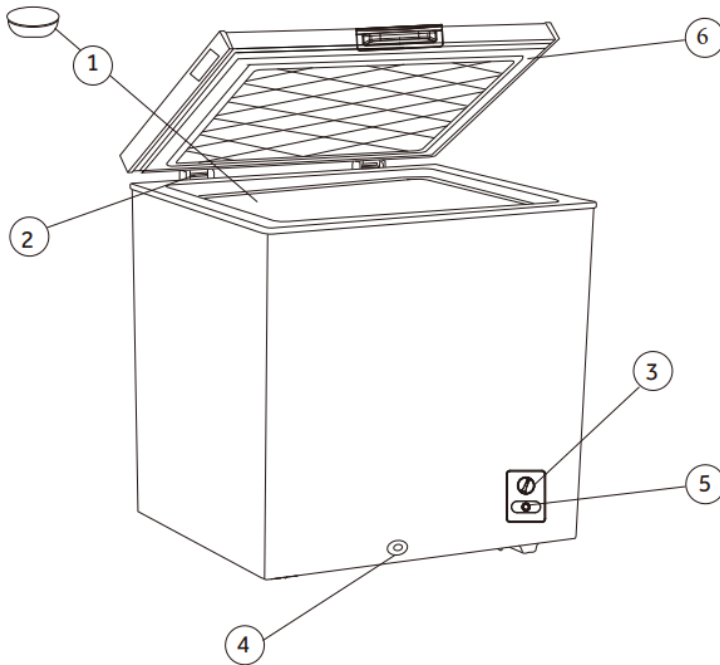

1 - Interior Drain Plug (See Insert)

2 - Lid Hinge

3 - Temperature Control:


OFF, Temperature Settings

4 - Exterior Drain Plug

5 - Power Indicator

6 - Lid Gasket

4.2. Freezer control

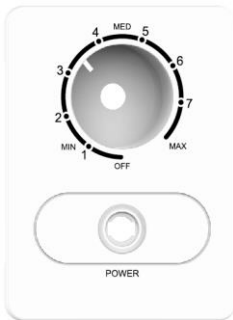

Control Settings

The temperature control regulates the temperature in the refrigerator. Setting the control at "1" is the warmest setting. Setting the control at "MAX" is the coldest setting. Initially set the Control at "4".

Allow 24 hours for the refrigerator to reach the operating temperature. If you want a colder or warmer temperature, move the dial one setting at a time. Moving the control to "OFF" stops cooling but does not turn off the power to the refrigerator. Setting the control too high may cause freezing in the refrigerator depending on the room temperature.

Operation - Temperature regulation

To switch on the appliance, turn the thermostat knob clockwise from "OFF" (stop) to the required cooling temperature:

The bigger the number is, the lower the temperature will be.

An intermediate thermostat setting is generally recommended.

4.3. Storing food and drink

For optimal use of the refrigerator compartment observe the following instructions:

- ✓ Never put hot liquids or food in the refrigerator
- ✓ Cover or wrap food prior to storage
- ✓ Arrange food so that air can circulate freely inside the compartment
- ✓ Meat (all types): Wrap in protective material and store time should be less than two days. Cooked food, cold meals etc. must be covered well and stored in any position in the refrigerator.
- ✓ Bananas, potatoes, onions and garlic should not be stored in the refrigerator unless wrapped first.

4.4. freezing fresh food

Appliances with compartments can be used to store frozen food for a maximum time of one month.

The interval between purchase and placing the food in the freezer should be as short as possible.

Never exceed the storage period indicated on the food packaging.

Only open the freezer door when necessary and as quick as possible.

In the event of operation after prolonged periods of disuse, switch on the appliance under no-load conditions for 2-3 hours taking care to set the thermostat knob to the highest setting, then place food in the refrigerator as required and adjust the thermostat knob to an intermediate setting.

Important

If food stored in the compartment is defrosted, e.g. due to a power failure, it should be consumed within a short time even if not completely thawed.

Ice

The appliance is supplied with an ice tray to make ice. If the ice tray freezes onto the compartment, never use metal and/or sharp objects to detach the tray from the compartment.

4.5. Defrosting food

For optimal cooking results with frozen food, we recommend defrosting inside the refrigerator or at ambient temperature, the latter obviously required less time. If you need to save time and cook food in the shortest time, you can cook small items directly from frozen by lengthening the cooking time slightly or put the big size items in a microwave oven to reduce defrosting time.

5 CLEANING AND MAINTENANCE

5.1 USE WITH CARE

- ✓ Refrigerating appliance loading should not exceed its storage volume
- ✓ If the refrigerating appliance stopped for a long time (due to interruption of power supply or failure of the refrigerating system), the frozen food (fresh food) had better to be disposed of according to user's need.
- ✓ It is better to arrange the food when storage, to avoid cross-contamination.

- ✓ Some types of fresh vegetables and fruits are sensitive to cold; therefore they are not suitable for storage in chill compartment.

5.2. Defrosting the freezer

Periodically clean the defrost water drain outlet in the refrigerator compartment. Frost should be removed from the freezer compartment once it reaches a thickness of over 3-4mm. Never use metal objects to remove the ice as it could damage the appliance.

5.3. Refrigerator lamp (suitable for appliances with lamp)

The central section of the thermostat box is fitted with a lamp for internal lighting. If replacement is required, disconnect the appliance from the power supply; remove the Lamp cover firstly, then to unscrew the bulb at thermostat box. Replace with a bulb (E14, 10W max.) of the same voltage and the same screw size. Replace the Lamp cover unit to complete the bulb replacement.

5.4. Prolonged periods of disuse

If you do not intend to use the appliance for long periods of time, set the thermostat knob to the STOP (0) position and disconnect the power supply. Then take out the foods, defrost and clean the appliance. Leave the door slightly open.

5.5. Cleaning the appliance

- ✓ Disconnect the power supply before cleaning the appliance.
- ✓ Do not use coarse or aggressive cleaning agents as you may damage the surface.
- ✓ Clean the exterior with moist cloth adding one or two drops of detergent.
- ✓ Remove the detachable accessories in the interior of the appliance and clean with moist cloth. Plastic parts cannot be washed in dishwashers.
- ✓ Clean the interior of the appliance, except for the lamp holder and lamp with moist cloth, adding one or two drops of vinegar.
- ✓ After cleaning, connect the appliance to power supply and reload it.

6 TROUBLESHOOTING

Defective operation of the appliance is not always due to a technical fault but is often caused by incorrect installation or use. To avoid unnecessary technical assistance and relative expenses we recommend the following procedures.

Internal temperature is not cool enough.

Check:

Make sure that the door closes properly;

Make sure that the thermostat setting is correct;

Make sure that the refrigerator is not positioned close to heat sources;

Make sure that air can circulate freely at the rear of the appliance;

Make sure that the condenser is not blocked.

Internal temperature is too low

Check:

-Make sure that the thermostat setting is correct.

Excessive appliance noise level

Check:

- Make sure that the appliance is leveled correctly.

Appliance operation failure

Check:

- Make sure that the thermostat is not set to "0";

- Make sure that the power supply is not disconnected;

- Make sure that the plug is inserted correctly into the mains socket;

- Make sure that the automatic cut-out on the mains line has not tripped or that the fuse has not broken;

- Make sure that the power cable is not faulty.

Internal lamp does not work (suitable for appliances with lamp)

Check:

- That the appliance is switched on. Otherwise disconnect the plug from the mains socket, remove the protection grille from the thermostat unit and check that the bulb is screwed correctly. Replace the lamp with a new one (10W max.) that has the same voltage as that indicated on the data plate on the unit.

Presence of water at the base of the refrigerator

Check:

✓ Make sure that the water drain outlet at the rear is not obstructed. Clean it if necessary.

NOTE

If the power cable damaged and need to be replaced, turn off the power supply, remove the plug from the power socket. New cable installation must be carried out by a licensed electrician who will ensure that it is properly connected and fixed.

7 TECHNICAL SPECIFICATIONS

Freezer capacity size	208 litres
Freezer size	940mm x 570mm x 845mm (WxDxH)
Weight	Approx. 52kg
Voltage rating	220-240V 50Hz
Energy rating	Ref energy label

Note: The values provided with the appliance or its accompanying documents are laboratory readings in accordance with the respective standards. These values may differ depending on the use and ambient conditions. Figures in this guide are schematic and may not be exactly match your product. We continually strive to improve our products. The specifications and designs might be changed without notice.

8 DISPOSAL



This appliance requires special waste disposal.

For further information regarding the treatment, recovery and recycling of this product please contact your local council, household waste disposal service or the store of purchase.

The packaging materials are recyclable.

The following procedure is recommended:

- ✓ dispose of paper, card and carton in the relative containers
- ✓ dispose of plastics in the relative containers
- ✓ If you have no recycling bins in your area then you can put this material in the ordinary bins and/or take it to the appropriate collection centers.

9 CUSTOMER CARE

- Please be advised that without the proof of purchase, your warranty may not be valid, **keep the receipt**.

For your convenience, please record:

STORE NAME/CONTACT DETAILS:

PURCHASE DATE:

PRODUCT MODEL N:

PRODUCT SERIAL N:

- The warranty will be voided, if not installed by a licensed professional.

For your own protection, please record installer's details:

Installer's Trade Name:

Trade Licence N:

Date of Installation:

Installation Receipt:

For further information on the appliance, service, spare parts or to obtain dimension and installation information, please contact our customer service or visit website.

Please have above information and documents on hands before contacting customer service

Phone: 1300 615 001

Email: info@trinityappliances.com.au

Web: trinityappliances.com.au

